



ENVOY AUTHORITY22®

No tap


Crosswise Ratios (by units)

Zone 1	Average	Ratio	Zone 5	Average	Ratio
3L-7L Left =	44.0	1.9	3L-7L Left =	5.0	7.0
3R-7R Right =	44.0	1.9	3R-7R Right =	5.0	7.0
18L-18R Center =	85.0		18L-18R Center =	35.0	
Zone 2	Average	Ratio	Zone 6	Average	Ratio
3L-7L Left =	23.4	3.2	3L-7L Left =	0.0	#####
3R-7R Right =	23.4	3.2	3R-7R Right =	0.0	#####
18L-18R Center =	75.0		18L-18R Center =	0.0	
Zone 3	Average	Ratio	Zone 7	Average	Ratio
3L-7L Left =	10.0	6.0	3L-7L Left =	#####	#####
3R-7R Right =	10.0	6.0	3R-7R Right =	#####	#####
18L-18R Center =	60.0		18L-18R Center =	#####	
Zone 4	Average	Ratio	Zone 8	Average	Ratio
3L-7L Left =	7.0	6.4	3L-7L Left =	#####	#####
3R-7R Right =	7.0	6.4	3R-7R Right =	#####	#####
18L-18R Center =	45.0		18L-18R Center =	#####	

Crosswise Ratios (by ml)

Zone 1	Average	Ratio	Zone 5	Average	Ratio
3L-7L Left =	0.148	1.9	3L-7L Left =	0.010	7.0
3R-7R Right =	0.148	1.9	3R-7R Right =	0.010	7.0
18L-18R Center =	0.285		18L-18R Center =	0.073	
Zone 2	Average	Ratio	Zone 6	Average	Ratio
3L-7L Left =	0.078	3.2	3L-7L Left =	0.000	#####
3R-7R Right =	0.078	3.2	3R-7R Right =	0.000	#####
18L-18R Center =	0.251		18L-18R Center =	0.000	
Zone 3	Average	Ratio	Zone 7	Average	Ratio
3L-7L Left =	0.025	6.0	3L-7L Left =	0.000	#####
3R-7R Right =	0.025	6.0	3R-7R Right =	0.000	#####
18L-18R Center =	0.151		18L-18R Center =	0.000	
Zone 4	Average	Ratio	Zone 8	Average	Ratio
3L-7L Left =	0.015	6.4	3L-7L Left =	0.000	#####
3R-7R Right =	0.015	6.4	3R-7R Right =	0.000	#####
18L-18R Center =	0.094		18L-18R Center =	0.000	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

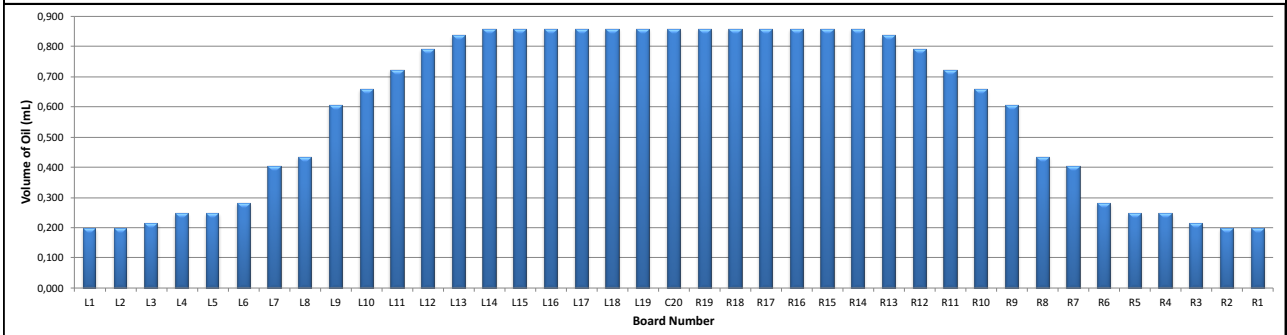

3L-7L:18L-18R	Ratio by Total Volume	18L-18R:7R-3R
3,09	1	3,09