



Select Machine

Pattern Information

Date: 15-Nov-16
 Pattern Type: Training
 Pattern Difficulty: Low
 Pattern Designer: BB
 Pattern Volume (ml): 22,73
 Surface Information
 Surface Type: Synthetic
 Surface Brand: AMF SPL
 Age:

Pattern Parameters

Pattern Number: 10
 Pattern Name: No tap
 Mode: Clean & Oil
 Forward Speed: Max Clean
 Start Cleaner Spray: 0
 Start Squeegee: 0
 Start Oiling: 6
 Split Pattern: No


Supplies Information

Lane Cleaner: Max 20
 Cleaner Mixture Ratio: : 1
 Cleaner Transition Distance: Authority22
 Cleaner Spray End Distance: 57 Envoy
 Lane Conditioner: Connect

Notes

Zone	1	2	3	4	5	6	7	8
Zone End Distance	8	16	22	27	32	39		
Zone Ratio L	1,9 : 1	3,2 : 1	6,0 : 1	6,4 : 1	7,0 : 1	### : 1	### : 1	### : 1
Zone Ratio R	1,9 : 1	3,2 : 1	6,0 : 1	6,4 : 1	7,0 : 1	### : 1	### : 1	### : 1
Zone Volume (ml)	8,70	6,98	3,70	1,96	1,39	0,00	0,00	0,00

ZONE	7 Pin Side														Board Number												10 Pin Side												
	L1	L2	L3	L4	L5	L6	L7	L8	L9	L10	L11	L12	L13	L14	L15	L16	L17	L18	L19	C20	R19	R18	R17	R16	R15	R14	R13	R12	R11	R10	R9	R8	R7	R6	R5	R4	R3	R2	R1
1	25	25	30	40	40	50	60	65	75	80	85	85	85	85	85	85	85	85	85	85	85	85	85	85	85	85	85	85	80	75	65	60	50	40	40	30	25	25	
2	18	18	18	18	18	18	45	45	65	70	70	75	75	75	75	75	75	75	75	75	75	75	75	75	75	75	75	75	70	70	65	45	45	18	18	18	18	18	18
3	10	10	10	10	10	10	10	15	43	51	51	55	60	60	60	60	60	60	60	60	60	60	60	60	60	60	60	55	51	51	43	15	10	10	10	10	10	10	10
4	7	7	7	7	7	7	7	7	7	25	35	45	45	45	45	45	45	45	45	45	45	45	45	45	45	45	45	35	25	7	7	7	7	7	7	7	7	7	
5	5	5	5	5	5	5	5	5	5	5	10	20	25	35	35	35	35	35	35	35	35	35	35	35	35	35	35	25	20	10	5	5	5	5	5	5	5	5	
6	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	
7																																							
8																																							

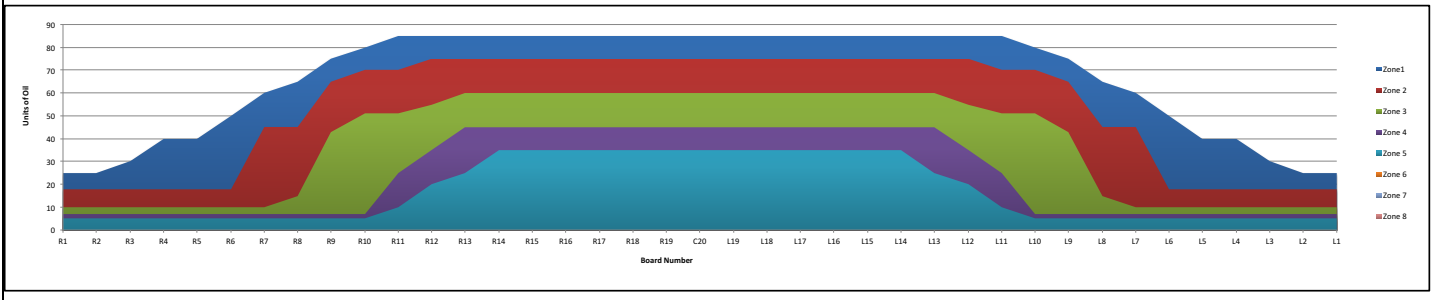



ENVOY AUTHORITY22®

No tap


Crosswise Ratios (by units)

Zone 1	Average	Ratio	Zone 5	Average	Ratio
3L-7L Left =	44.0	1.9	3L-7L Left =	5.0	7.0
3R-7R Right =	44.0	1.9	3R-7R Right =	5.0	7.0
18L-18R Center =	85.0		18L-18R Center =	35.0	
Zone 2	Average	Ratio	Zone 6	Average	Ratio
3L-7L Left =	23.4	3.2	3L-7L Left =	0.0	#####
3R-7R Right =	23.4	3.2	3R-7R Right =	0.0	#####
18L-18R Center =	75.0		18L-18R Center =	0.0	
Zone 3	Average	Ratio	Zone 7	Average	Ratio
3L-7L Left =	10.0	6.0	3L-7L Left =	#####	#####
3R-7R Right =	10.0	6.0	3R-7R Right =	#####	#####
18L-18R Center =	60.0		18L-18R Center =	#####	
Zone 4	Average	Ratio	Zone 8	Average	Ratio
3L-7L Left =	7.0	6.4	3L-7L Left =	#####	#####
3R-7R Right =	7.0	6.4	3R-7R Right =	#####	#####
18L-18R Center =	45.0		18L-18R Center =	#####	

Crosswise Ratios (by ml)

Zone 1	Average	Ratio	Zone 5	Average	Ratio
3L-7L Left =	0.148	1.9	3L-7L Left =	0.010	7.0
3R-7R Right =	0.148	1.9	3R-7R Right =	0.010	7.0
18L-18R Center =	0.285		18L-18R Center =	0.073	
Zone 2	Average	Ratio	Zone 6	Average	Ratio
3L-7L Left =	0.078	3.2	3L-7L Left =	0.000	#####
3R-7R Right =	0.078	3.2	3R-7R Right =	0.000	#####
18L-18R Center =	0.251		18L-18R Center =	0.000	
Zone 3	Average	Ratio	Zone 7	Average	Ratio
3L-7L Left =	0.025	6.0	3L-7L Left =	0.000	#####
3R-7R Right =	0.025	6.0	3R-7R Right =	0.000	#####
18L-18R Center =	0.151		18L-18R Center =	0.000	
Zone 4	Average	Ratio	Zone 8	Average	Ratio
3L-7L Left =	0.015	6.4	3L-7L Left =	0.000	#####
3R-7R Right =	0.015	6.4	3R-7R Right =	0.000	#####
18L-18R Center =	0.094		18L-18R Center =	0.000	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

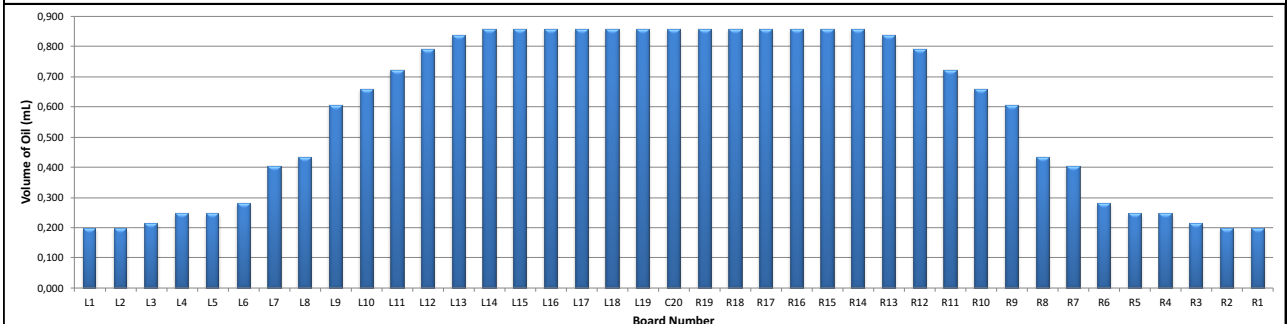

3L-7L:18L-18R	Ratio by Total Volume	18L-18R:7R-3R
3,09	1	3,09



Lengthwise Ratio By Area

	3L-7L	18L-18R	3R-7R
	Left	Center	Right
Zone 2	1,8	1,1	1,8
Zone 3	4,4	1,4	4,4
Zone 4	6,2	1,8	6,2
Zone 5	8,8	2,4	8,8
Zone 6	#####	#####	#####
Zone 7	#####	#####	#####
Zone 8	#####	#####	#####

No tap

Lengthwise Ratio By Board (units & ml)

Zone	7 Pin Side														Board Number										10 Pin Side																	
	L1	L2	L3	L4	L5	L6	L7	L8	L9	L10	L11	L12	L13	L14	L15	L16	L17	L18	L19	C20	R19	R18	R17	R16	R15	R14	R13	R12	R11	R10	R9	R8	R7	R6	R5	R4	R3	R2	R1			
2	1,4	1,4	1,7	2,2	2,2	2,8	1,3	1,4	1,2	1,1	1,2	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,1	1,2	1,1	1,2	1,4	1,3	2,8	2,2	2,2	1,7	1,4	1,4			
3	2,5	2,5	3,0	4,0	4,0	5,0	6,0	4,3	1,7	1,6	1,7	1,5	1,4	1,4	1,4	1,4	1,4	1,4	1,4	1,4	1,4	1,4	1,4	1,4	1,4	1,4	1,4	1,4	1,5	1,7	1,6	1,7	4,3	6,0	5,0	4,0	4,0	3,0	2,5	2,5		
4	3,6	3,6	4,3	5,7	5,7	7,1	8,6	9,3	10,7	11,4	3,4	2,4	1,9	1,9	1,9	1,9	1,9	1,9	1,9	1,9	1,9	1,9	1,9	1,9	1,9	1,9	1,9	2,4	3,4	11,4	10,7	9,3	8,6	7,1	5,7	5,7	4,3	3,6	3,6			
5	5,0	5,0	6,0	8,0	8,0	10,0	12,0	13,0	15,0	16,0	8,5	4,3	3,4	2,4	2,4	2,4	2,4	2,4	2,4	2,4	2,4	2,4	2,4	2,4	2,4	2,4	2,4	3,4	4,3	8,5	16,0	15,0	13,0	12,0	10,0	8,0	8,0	6,0	5,0	5,0		
6	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####
7	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####
8	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####	#####

The lengthwise ratios are calculated from the volumes in the first zone.